

KAWASAKI KLE 650 VERSYS

PL

W skład zestawu wchodzi:

1. Orurowanie prawe
2. Orurowanie lewe
3. Wspornik górny
4. 2 śruby M8x25 mm z podkładkami i nakrętkami
5. 2 śruby M8x30 mm z podkładkami
6. Śruba M8x30 mm z podkładkami i nakrętką
7. 2 śruby M8x30 mm z podkładkami i nakrętkami

Orurowanie powinno być zakładane tylko przez osobę wykwalifikowaną. Należy zwrócić szczególną uwagę na wiązki elektryczne, przewody hamulcowe oraz przewody gumowe chłodzenia silnika tak, aby nie były przyciśnięte lub nie tarły podczas eksploatacji z powodu źle przeprowadzonego montażu orurowania.

Całość orurowania założyć swobodnie dopiero na końcu skręcić docelowo. Do zabezpieczenia połączeń gwintowanych wszystkich śrub i nakrętek zaleca się użycie średnio demontowalnego kleju do gwintów (np. „Loctite”).

1. Wykręcić 2 śruby z mocowania stelaża owiewek do główki ramy (Rys. 2 pkt. 4).
2. Zainstalować wspornik górny orurowania (Rys. 3 pkt. 3) przykręcając go 2 śrubami M8x25 mm z podkładkami i nakrętkami z zestawu w miejscu śrub usuniętych w kroku 1 (Rys. 3 pkt. 4).
3. Wykręcić 2 śruby z ramy po prawej stronie motocykla (Rys. 4 pkt. 5).
4. Zainstalować prawe orurowanie (Rys. 1 i 5 pkt. 1):
 - dolny uchwyt przykręcić 2 śrubami M8x30 mm z podkładkami i nakrętkami z zestawu w miejscu śrub usuniętych w kroku 3 (Rys. 5 pkt. 5),
 - w górnej części przymocować gmoł do wspornika górnego (Rys. 3 pkt. 3) zainstalowanego w kroku 2 za pomocą śruby M8x30 mm z podkładkami i nakrętką z zestawu (Rys. 3 pkt. 6). Nie dokręcać śruby, gdyż posłuży ona również do przymocowania lewego gmoła.
5. Zainstalować lewe orurowanie (Rys. 1 i 7 pkt. 2):
 - dolny uchwyt orurowania przykręcić do pustych otworów technologicznych w ramie motocykla (Rys. 6 pkt. 7), 2 śrubami M8x30 mm z podkładkami i nakrętkami z zestawu (Rys. 7 pkt. 7),
 - w górnej części połączyć orurowanie z górnym wspornikiem i prawym orurowaniem za pomocą zainstalowanej w kroku 4 śruby M8x30 mm z nakrętką (Rys. 3 pkt. 6).
6. Dokręcić wszystkie śruby docelowo.

Po przejechaniu 50 km zalecane jest sprawdzenie poprawności dokręcenia wszystkich śrub.

KAWASAKI KLE 650 VERSYS

EN

The set includes:

1. Right piping
2. Left piping
3. Upper bracket
4. 2 M8x25mm bolts with washers and nuts
5. 2 M8x30mm bolts with washers
6. M8x30mm bolt with washers and nut
7. 2 M8x30mm bolts with washers and nuts

Piping should be installed only by a qualified person. Pay particular attention to the electric beams, brake hoses and rubber hoses for engine cooling, so that they are not pinched or they doesn't chafe during operation due to wrong installation of piping. During installation it is recommended to set up piping freely.


Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

1. Unscrew 2 bolts from the point where fairing frame is connected to frame head (Fig. 2 pt. 4).
2. Install upper bracket (Fig. 3 pt. 3), screw it with 2 M8x25mm bolts with washers and nut from the set in the place of removed in step 1 bolts (Fig. 3 pt. 4).
3. Unscrew 2 bolts from the frame in the right side of motorcycle (Fig. 4 pt. 5).
4. Install right piping (Fig. 1 and 5 pt. 1):
 - screw lower handle with 2 M8x30mm bolts with washers and nuts from the set, in place of removed bolts in step 3 (Fig. 5 pt. 5),
 - in the upper side, connect piping to upper bracket (Fig. 3 pt. 3), which was installed in step 2 by using M8x30mm bolt with washers and nut from the set (Fig. 3 pt. 6). Do not tighten this bolt, it will be also used to connect left piping.
5. Install left piping (Fig. 1 and 7 pt. 2):
 - in empty technological holes in the motorcycle frame (Fig. 6 pt. 7), screw lower handle with 2 M8x30mm bolts with washers and nuts from the set (Fig. 7 pt. 7),
 - in the upper side, connect piping with upper bracket and right piping using M8x30mm bolt with washers and nut installed in step 4 (Fig. 3 pt. 6).
6. Tighten all bolts and nuts holding the piping.


After 50 km it is recommended to control, if all bolts are tightened correctly.

Instrukcja montażu gmoli dla / Crash bars installation instruction for


KAWASAKI KLE 650 VERSYS

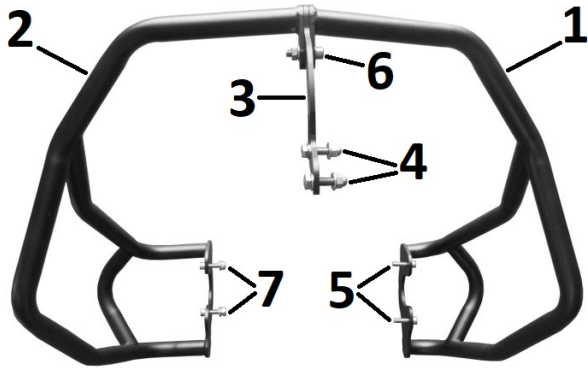

Rys. / Fig. 1

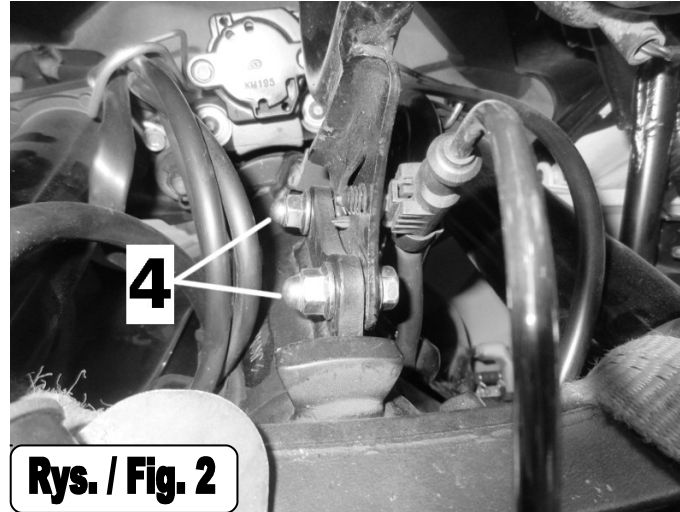

Rys. / Fig. 2

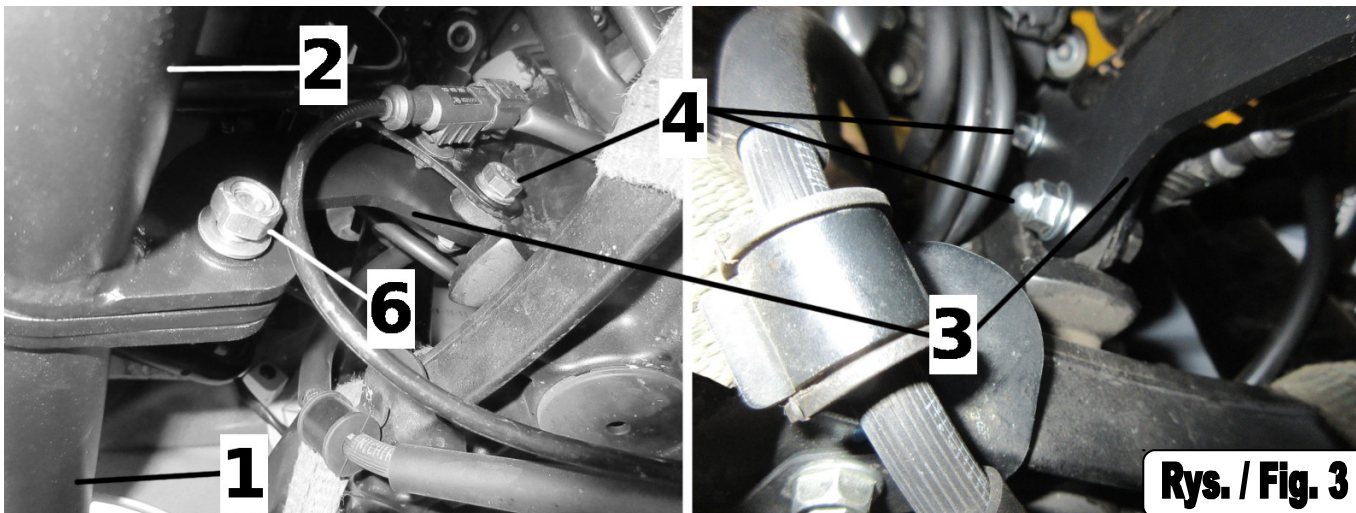

Rys. / Fig. 3

Instrukcja montażu gmoli dla / Crash bars installation instruction for

KAWASAKI KLE 650 VERSYS

